



These instructions are also on the
Geelong P&Q Guild website
www.geelongpatch.org.au

Projector Screen Erection 101

by One-Person

(with a 2nd person to read these instructions)

NO FORCE IS NEEDED

<p>In vertical position Wriggle legs open a bit Lift off the ground Push on red leg tag to open legs fully</p>
<p>Lift top clip about 1 inch to disengage screen roller blind</p>
<p>Facing screen Rotate screen clockwise to horizontal</p>
<p>Look at the upper pole Slide it up until 4th hole is exposed to see where we're headed Slide upper pole down to its rest stop</p>
<p>Raise screen, hook to top of upper pole</p>
<p>Go round the back Make sure red pole clip is fully pushed in Put one foot into the leg tripod to stabilize yourself and the screen Extend the pole to just past the 4th hole Ease down & engage the red pole clip by pulling the red clip towards you OR by pushing it from the back</p>
<p>At the handle right hand releases the round red button left hand squeezes the silver clip upwards Lower the roller to extend the screen downwards</p>
<p>HOORAY - it's up!</p>



These instructions are also on the
Geelong P&Q Guild website
www.geelongpatch.org.au

Projector Screen Dismantle 101

by One-Person

(with a 2nd person to read these instructions)

NO FORCE IS NEEDED

<p>At the back at the handle left hand squeezes the silver clip upwards right hand raises the lower part of the screen the round red button will engage in the first hole</p>
<p>Taking the weight of the screen via the upper pole Release the red pole clip and lower the upper pole to its rest stop</p>
<p>Go round to face the screen Unhook and close the screen</p>
<p>Raise upper pole again, only 2 inches</p>
<p>Rotate screen anti-clockwise to vertical</p>
<p>Locate top clip of the upper pole in the hole in end of the screen roller blind</p>
<p>Pull on red leg tag to close legs flat</p>
<p>HOORAY! It's ready to travel back to Storage</p>